

 
## Accessories use tips

Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

Level:



Hot



Accessory	Functions	Level
	<input checked="" type="checkbox"/> Air fry	1
	<input checked="" type="checkbox"/> Toast <input checked="" type="checkbox"/> Bake <input checked="" type="checkbox"/> Broil	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Air Baking <input checked="" type="checkbox"/> Roast <input checked="" type="checkbox"/> Broil	1 1 0 / 1 / 2

\* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

IMPORTANT: Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.


## Consells d'utilització dels accessoris

 Placer les accessoris au bon niveau pour obtenir les meilleures performances de cuisson. Voir les recettes sur le guide des commandes en ligne.

Niveau:



Chaud



Accessoire	Fonction	Niveau
	<input checked="" type="checkbox"/> Friture à l'air	1
	<input checked="" type="checkbox"/> Rôtir <input checked="" type="checkbox"/> Cuisson au four <input checked="" type="checkbox"/> Cuisson au grill	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Cuisson à l'air <input checked="" type="checkbox"/> Rôtissage <input checked="" type="checkbox"/> Cuisson au grill	1 1 0 / 1 / 2

\* Pour la cuisson d'aliments gras ou juteux, placer une plaque de cuisson résistante au four sur le fond du four pour récupérer les gouttes.

IMPORTANT : Ne pas utiliser les accessoires inclus ou d'autres ustensiles de cuisine en métal pendant les fonctions d'utilisation du micro-ondes, comme le réchauffage, la décongélation, faire ramollir, faire fondre, le maintien au chaud et la cuisson.

P/N : W11582330B