


# Accessories use tips

Placing accessories on the correct level will achieve better cooking performance. See the recipes on the online control guide.

Accessory	Functions	Level
	<input checked="" type="checkbox"/> Air fry <input checked="" type="checkbox"/> Dehydrate	1
	<input checked="" type="checkbox"/> Toast <input checked="" type="checkbox"/> Bake <input checked="" type="checkbox"/> Broil	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Air baking <input checked="" type="checkbox"/> Roast <input checked="" type="checkbox"/> Broil <input checked="" type="checkbox"/> Bake	1 1 0 / 1 / 2 0 / 1

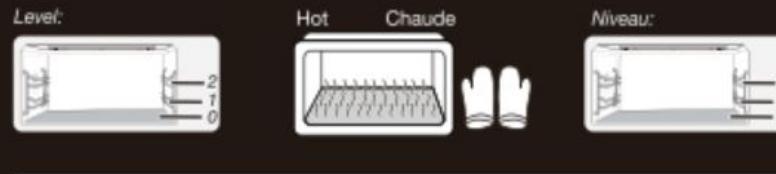

**IMPORTANT:** Do not use included accessories or other metal cookware during microwave functions, such as reheat, defrost, soften, melt, keep warm and cook.

\* When cooking oily or juicy foods, place an oven-proof baking plate on the oven bottom to catch drippings.

# Conseils d'utilisation des accessoires

Placer les accessoires au bon niveau pour obtenir les meilleures performances de cuisson. Voir les recettes sur le guide des commandes en ligne.

Accessoire	Fonction	Niveau
	<input checked="" type="checkbox"/> Friture à l'air <input checked="" type="checkbox"/> Déshydrater	1 1
	<input checked="" type="checkbox"/> Rôtir <input checked="" type="checkbox"/> Cuisson au four <input checked="" type="checkbox"/> Cuisson au gril	0 / 1 0 / 1 0 / 1 / 2
	<input checked="" type="checkbox"/> Cuisson à l'air <input checked="" type="checkbox"/> Rôtissage <input checked="" type="checkbox"/> Cuisson au gril <input checked="" type="checkbox"/> Cuisson au four	1 1 0 / 1 / 2 0 / 1

\* Pour la cuisson d'aliments gras ou juteux, placer une plaque de cuisson résistante au four sur le fond du four pour récupérer les gouttes.

PIN : W11582318B