

Charlotte UserManual

VRH-CHARLOTTE



Vesta

Simple Kitchen Solutions

Table of Contents

| | |
|--|-------|
| Important Safety Notice | 3-5 |
| Main Parts Name and opening sizs | 6 |
| Tools needed and parts supplied | 7 |
| Venting requirements | 8 |
| Installation Procedures | 9-14 |
| Operation | 15 |
| Trouble shooting | 16 |
| Wiring diagram and specifications | 17 |
| Use and care information | 18 |
| Maintenance | 19 |
| Cleaning filters and replace LED light | 20 |
| Warranty | 21-22 |
| Disclaimer | 23 |
| Contact | 24 |

Important Safety Notice

READ ALL INSTRUCTIONS BEFORE INSTALLING AND OPERATING THIS APPLIANCE

- The installation in this manual is intended for qualified installers, service technicians or persons with similar qualified background. Installation and electrical wiring must be done by qualified professionals and in accordance with all applicable codes and standards, including fire-rated construction.
- DO NOT attempt to install this appliance yourself. Injury could result from installing the unit due to lack of appropriate electrical and technical background.
- Range hood may have very sharp edges; please wear protective gloves if it is necessary to remove any parts for installing, cleaning or servicing.
- Activating any switch ON before completing installation may cause ignition or an explosion.
- Due to the size and weight of this range hood, two people installation is recommended.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- For general ventilating use only . DO NOT use to exhaust hazardous or explosive materials and vapors.
- The combustion air flow needed for safe operation of fuel-burning equipment may be affected by this unit's operation.

Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society of Heating , Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

- Before servicing or cleaning unit, switch power OFF at service panel and lock service panel to prevent power from being switched ON accidentally.
- Clean grease laden surfaces frequently. To reduce the risk of fire and to disperse air properly, make sure to vent air outside.
DO NOT vent exhaust into spaces between walls, crawl spaces , ceiling , attics or garages.
- Ducted fans MUST always be vented to the outdoors.

- Use only metal ductwork and this unit MUST be grounded.
 - Sufficient air is needed for proper combustion and exhausting of gases through the duct to prevent back drafting.
 - When cutting or drilling into wall or ceiling, be careful not to damage electrical wiring or other hidden utilities.
 - All electrical wiring must be properly installed, insulated and grounded.
 - Old duct work should be cleaned or replaced if necessary to avoid the possibility of a grease fire.
 - Check all joints on duct work to insure proper connection and all joints should be properly taped.
 - Use this unit only in the manner intended by the manufacturer. If you have questions, contact the vendor.
-
- Keep all fan, baffle, spaces filter, grease tunnel, oil container and grease-laden surfaces clean. Grease should not be allowed to accumulate on fan, baffle, spaces, filter, grease tunnel and oil container.
 - Always turn range hood ON when cooking at high heat or when cooking flaming foods.
 - Use high settings on cooking range only when necessary.
 - Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spill overs that may ignite.
 - Heat oils slowly on low or medium settings
 - Clean ventilating fan frequently.
 - Always use appropriate cook ware and utensils size.
Always use cookware appropriate for the size of the surface element.
-
- SMOTHER FLAMES with a close-fitting lid, cookie sheet, or metal tray, then turn OFF the burner . BE CAREFUL TO PREVENT BURNS. NEVER PICK UP A FLAMING PAN—you may be burned.
KEEP FLAMMABLE OR COMBUSTIBLE MATERIAL AWAY FROM FLAMES.
If the flames DO NOT go out immediately, EVACUATE AND CALL THE FIRE DEPARTMENT or dial your local emergency service immediately.

- **DO NOT USE WATER**, including wet dishcloths or towels — a violent steam explosion will result.
- Use an extinguisher **ONLY** if:
- You know you have a Class A, B, C extinguisher, and you already know how to operate it.
- The fire is small and contained in the area where it is started.
- The fire department is being called.
- You can fight the fire with your back to an exit.

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A GAS LEAKS:

- Extinguish any open flame
- **DO NOT** turn on the range hood fan or any type of ventilator.
- **DO NOT** turn on the lights or any type of appliance
- Open all doors and windows to disperse the gas. If you still smell gas, call the gas company and fire department, or dial your local emergency service immediately.
- Your safety and the safety of others is very important. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.



This is the safety alert symbol. This symbol alerts you to potential hazards that can hurt you and others. All safety messages will follow the safety alert symbol and the word "WARNING".

The manufacturer and/or distributor/reseller declines all responsibility in the event of failure to observe the instructions given here for installation, maintenance and suitable use of the product.


The manufacturer and/or distributor/reseller further declines all responsibility for injury due to negligence and the warranty of the unit automatically expires due to improper maintenance.

The manufacturer and/or distributor/reseller will not be held responsible for any damages to personal property or real estate or any bodily injuries whether caused directly or indirectly by the range hood.




Main Parts Name

Hood Body


Baffle filter

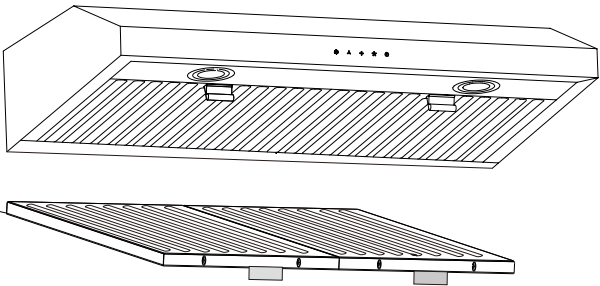

Opening size

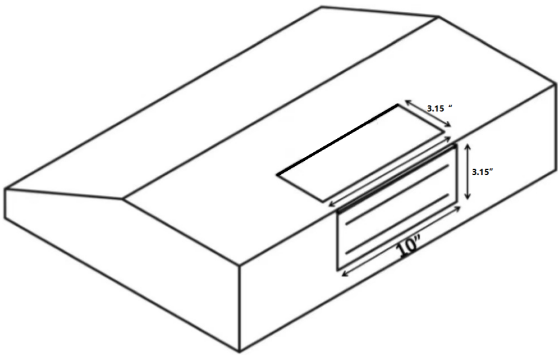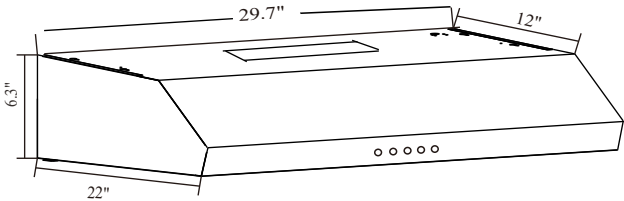

Tools Needed

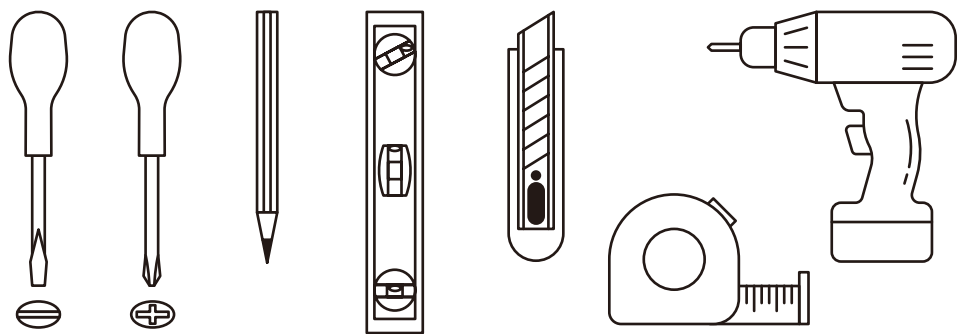


Parts Supplied



Range Hood
x1



Baffle Filter
x2



Air Vent
x1



Wire connector
x3



Screws for air outlet
x4



Screws for install
x6



Washer
x2



Rubber cushion
x2



Ductless vent
x1

Venting Requirements

Vent system must terminate to the outside (roof or side wall).

DO NOT terminate the vent system in an attic or other enclosed area.

DO NOT use 4" (10.2 cm) laundry-type wall caps.

Use metal/aluminum vent only. Rigid metal/aluminum vent is recommended.

DO NOT use plastic vent.

Always keep the duct clean to ensure proper airflow.

Calculate the following figures before installation:

1. Distance from the floor to the ceiling.
2. Distance between the floor to the countertop/stove (US Standard: 36").
3. Distance between the countertop/stove to the range hood (recommend *28" to 31").
4. Height of hood and duct cover.

For the most efficient & quiet operation:

A distance of 28" to 31" is recommended between stove top and the bottom of range hood.

It is recommended that the range hood be vented vertically through the roof through 6" (15.2 cm) or bigger round metal/aluminum vent work.

The size of the vent should be uniform.

Use no more than three 90° elbows.

Make sure there is a minimum of 24" (61 cm) of straight vent between the elbows if more than one elbow is used.

DO NOT install two elbows together.

The length of vent system and number of elbows should be kept to a minimum to provide efficient performance.

The vent system must have a damper. If roof or wall cap has a damper, DO NOT use damper (if supplied) on top of the range hood.

Use silver tape or duct tape to seal all joints in the vent system.

Use caulking to seal exterior wall or roof opening around the cap.

Installation Procedures

Safety Warning: Hood may have very sharp edges. Please wear protective gloves if it is necessary to remove any parts from installing, cleaning or servicing.

Installation Height
3.The distance between the stove surface and the underside of the range hood must be in the range of 26"-30" Fig(2-A).

The duct opening size is in Fig 2(B)

Vent duct length
4.The length of the vent duct should be minimized to avoid air turbulence inside the duct. (Fig (2-B).

Balance level:
5.The range hood must be in level during the installation. A not level installation hood may cause improper operation, leaks and oil spill over from oil collectors. Fig(2-C)


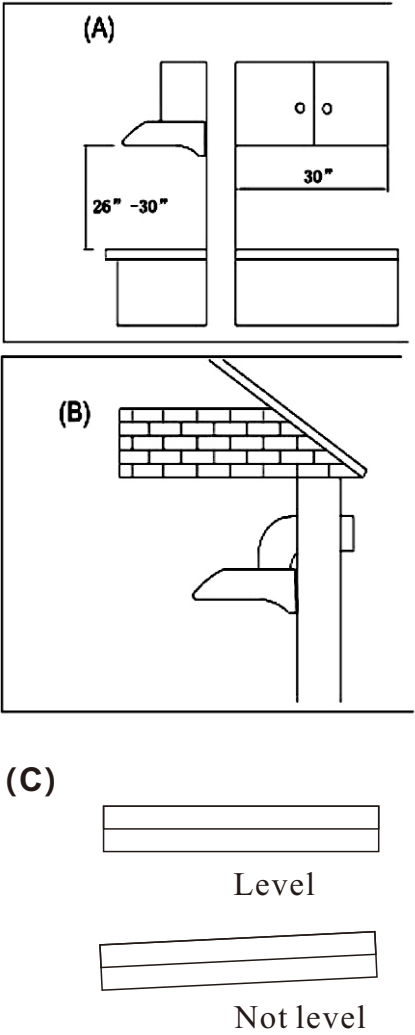


Fig 2

Calculating Vent System Length

To calculate the length of the system you need, add the equivalent feet (meters) for all vent pieces used in the system.

INSTALLATION DIMENSION RECOMMENDATIONS

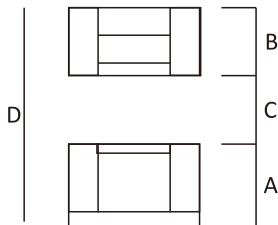


- A. Countertop Height.
- B. Hood height from ceiling to bottom of the range hood filter surface: $D - A - C = B$.
- C. 24" minimum from cooking surface up to 36" maximum for Electric/Induction range tops. 26" minimum from cooking surface up to 36" maximum for Gas range tops.
- D. Floor to ceiling height.

Prior to installation

- Unpack range hood and ensure all listed parts are in the box.
- It is recommended for the vent system to be installed before hood is installed.
- Before making cutouts, make sure there is proper clearance within the ceiling or walls for the exhaust vent.
- Some models may have foam protecting the motor, please remove, and discard this foam.
- Some models may have a protective Blue film on the filters (G), please remove, and discard this film.
- Determine which venting method to use: roof or wall.
- **It is recommended that a professional installer perform the range hood installation.**


Exhibit A

Roof venting

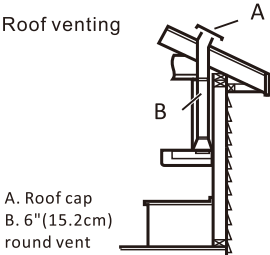

A. Roof cap
B. 6"(15.2cm)
round vent

Wall venting

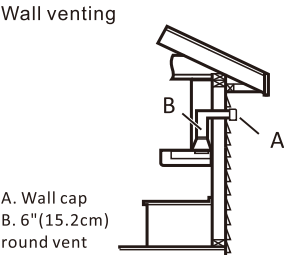

A. Wall cap
B. 6"(15.2cm)
round vent

INSTALLATION INSTRUCTIONS for Undercabinet Range Hood


Parts supplied:

Note: Fasteners may not **fit** your cabinets. Consult a professional installer for proper fasteners for your installation environment.

- A. Range hood
- B. 2 stainless steel baffle filters.
- C. One 3.15"x10" air vent for top or back venting path.
- D. One vent for ductless use.
- E. Three wire connectors for hard wiring.
- F. Four screws for air vent mounting.
- G. Four screws for range hood mounting.
- H. Two rubber cushions.
- I. Two washers for rubber cushions installation.
- J. Two screws for rubber cushion installation.

Installation of rubber cushion


Installing the rubber cushion in the following way can effectively reduce the vibration and noise when the range hood is working.

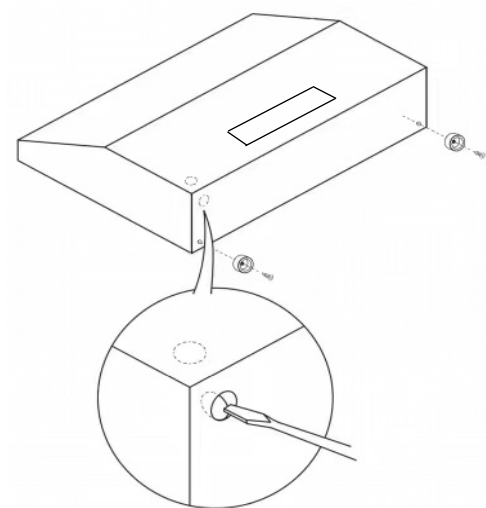

Venting Options

1. Top Venting

A. Use a flat-head screwdriver to remove the metal plate on the top of the range hood

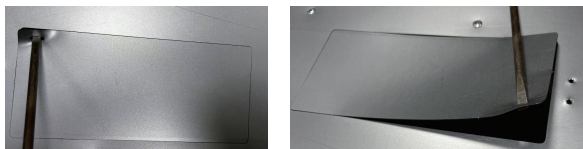

B. Install the rectangular air outlet on the top of the range hood with 4 screws.



C. Turn the air outlet switch inside the range hood to the left.




Back Venting

A. Use a flat-head screwdriver to remove the metal plate on the back of the range hood



B. Install the rectangular air outlet on the back of the range hood with 4 screws.

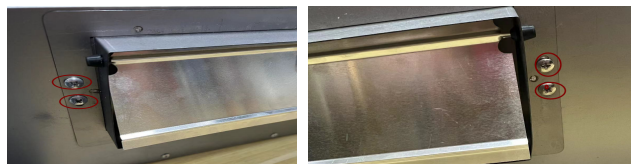

C.Turn the air outlet switch inside the range hood to the left.



Duckless Venting


A.Keep the metal plates both on the top and back of the hood intact.



B.Remove the rectangular metal plate on the top front side of the range hood and replace it with the metal plate with the air outlet.



Carbon filter installation

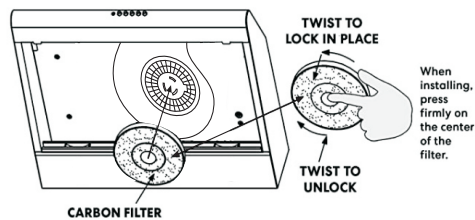

Installing the Range Hood

This installation is for mounting the product to the bottom of the cabinet. Please consult your professional installation specialist regarding the best type of mounting to suit your cabinets construction. Please be sure to read the entire instructions prior to installation.

1. Begin installation by removing the baffle or mesh filters from the bottom of the range hood, removing any tape on the air flow flappers, and removing any protective film on the touch sensor control panel (depending on model).
2. Determine location of power outlet or hardwire connection. You will need to create a cut-out hole on the bottom of the cabinet for the power cord. Prior to mounting the range hood, the power cord will be fed through the cut-out hole. For hard-wired installations choosing the rear exit for power, this cut-out hole is not required (see Power cord option for Hard Wired Models).
3. For Ducted Installations Only:
 - a. Measure the location where the duct (C or D) will enter the bottom of the cabinet or the wall for rear ducting.
 - b. Drill/cut out the required openings using a sabre saw or jigsaw for the duct; make sure the duct opening is large enough to accommodate ducting and to apply duct tape.
 - c. The cutout can be larger than the duct (C or D) dimension to allow room for ducting and duct tape.


Prior to creating cut-outs, please verify the accuracy of your dimensions with a tape measurer and consult with a professional installation specialist.






Electrical

1. If your unit comes with a three-pronged plug, insert into outlet.
2. If your unit is hard-wired, make sure this is done by a qualified electrician in accordance with all national and local electrical codes.
 - a) Before connecting the wires, switch the power off at the service panel and lock the service panel to prevent power from being switched on accidentally.
 - b) Connect the Black to Live, White to Neutral, and Green to Ground by either a solder or with electrical connectors.
 - c) This unit must be properly grounded.
3. Install duct work and seal with duct tape.
4. Reinstall the filters (E).

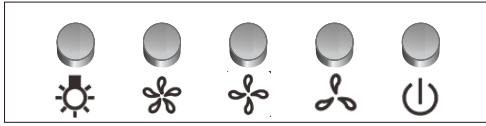Operations & Wiring Diagram

Charlotte (3 Speed push button)



-  Press to turn on /off the light.
-  Press to select the high speed.
-  Press to select the medium speed.
-  Press to select the low speed.
-  Press to select on/off.

Trouble shooting

If the range hood or LED light does not work after installation

- Check if the range hood has been plugged in, make sure that all power has been turned back ON, fused not blown and all electrical wiring are properly connected.
- Swap out light assembly to working ones to determine whether it is caused by defective bulbs. See replacing the bulbs on Page 23.

The range hood vibrates when the blower is on

- The range hood might not have been secured properly on to the ceiling or wall. Check with your installer.

The blower or fan seems weak

- Check that the duct sized used is at least 6" or 3-1/4 x 10".
Range hood WILL NOT function efficiently with insufficient duct size.
For example: 8" duct over 6" hole and loosely secured.
- Check if duct is clogged or if damper unit (half-circular flapper) is not installed correctly or opening properly. A tight mesh on a side wall cap unit might also cause restriction to the airflow.

The lights work but the blower is not spinning at all, is stuck or is rattling.

The blower might be jammed or scraping the bottom due to shipping damage.
Please contact us immediately.

The hood is not venting out properly.


- Make sure the distance between the stove top and the bottom of the hood is within * 28" and 31" in distance. Due to different ceiling height configurations, recommended height may not be applicable.
- Reduce the number of elbows and length of duct work.
Check if all joints are properly connected, sealed and taped.
- Make sure the power is on high speed for heavy cooking.

Purpose of the slots/holes/openings near the top of the upper chimney:

- These slots/holes/openings are used to exhaust cleaned air with optional re-circulating kit. If you did not install one, you do not need them.

NOTE: For all other inquiries, please contact your local reseller.

Wiring Diagram

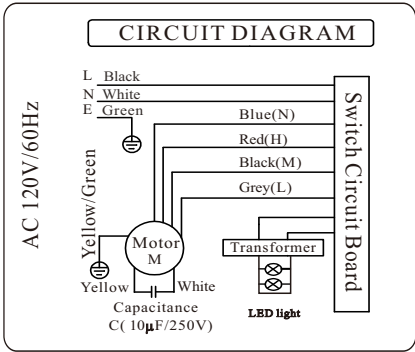

Specifications

| | |
|-------------------------|---|
| Body | Stainless Steel / Tempered Glass |
| Power Rating | 120V/60Hz (USA & Canada standard) |
| General Input Power | 75W + # of Light x Voltage of Light |
| Motor Input Power | 75W |
| Motor Revolution | 1100 RPM (±10%) to 1500 RPM (±10%) |
| Levels Of Speed Control | 3 |
| Maximum Airflow | 500 CFM |
| Air Pressure | 300 Pa (350 Pa Maximum) |
| Noise Level (dB) | Approximately 35 to 54 (Lowest to highest Speed) |
| Motor Type | Signal motors Ultra Quiet |
| Fan Type | Plastic fan |
| Control Type | Push button |
| Filtration Type | Baffle Filter |
| Illumination | LED light 2Wx2 |
| Venting Size | Top and back , 3.15x10 inches rectangle |
| Interference Protection | Radio Frequency Interference Protected |

* Subject to change without notice, please contact your local reseller for details.

Use and Care Information

Operations

Read and understand all instructions and warnings in this manual before operating the appliance. Save these instructions for future reference.

Always leave safety grills and filters in place. Without these components, operating blowers could catch on to hair, fingers and loose clothing.

NEVER dispose cigarette ashes ignitable substances, or any foreign objects into blowers.

NEVER leave cooking unattended. When frying, oil in the pan can easily overheat and catch fire. The risk of self-combustion is higher when the oil has been used several times.

NEVER cook on "open "flames under the range hood. Check deep-fryers during use: Superheated oil may be flammable.

Cleaning

The saturation of greasy residue in the blower and filters may cause increased inflammability. Keep unit clean and free of grease and residue build-up at all times to prevent possible fires.

Filters must be cleaned periodically and free from accumulation of cooking residue (see Maintenance on Page 33). Old and worn filters must be replaced immediately.

Do not operate blowers when filters are removed. Never disassemble parts to clean without proper instructions. Disassembly is recommended to be performed by qualified personnel only Read and underst and all instructions and warnings in this manual before proceeding.

Maintenance

SAFETY WARNING: Never put your hand into area housing the fan while the fan is operating!

For optimal operation, clean range hood and all baffle/spacer/filter/grease tunnel/oil container regularly. Regular care will help preserve the appearance of the range hood.

Cleaning Exterior surfaces

Clean periodically with hot soapy water and clean cotton cloth. Do not use corrosive or abrasive detergent (e.g. Comet Power Scrub®, EZ-Off® oven cleaner), or steel wool/scoring pads, which will scratch and damage the stainless steel surface. For heavier soil use liquid degrease such as "Formula 409®" or "Fantastic®" brand cleaner.

If hood looks splotchy (stainless steel hood), use a stainless steel cleaner to clean the surface of the hood. Avoid getting cleaning solution onto or into the control panel. Follow directions of the stainless steel cleaner. **CAUTION:** Do not leave on too long as this may cause damage to hood finish. Use soft towel to wipe off the cleaning solution, gently rub off any stubborn spots. Use dry soft towel to dry the hood.

After cleaning, you may use non abrasive stainless steel polish such as 3M® or ZEP®, to polish and buff out the stainless luster and grain. Always scrub lightly, with clean cotton cloth, and with the grain.

DO NOT allow deposits to accumulate or remain on the hood.

DO NOT use ordinary steel wool or steel brushes. Small bits of steel may adhere to the surface and cause rusting.

DO NOT allow salt solutions, disinfectants, bleaches, or cleaning compounds to remain in contact with stainless steel for extended periods. Many of these compounds contain chemicals, which may be harmful. Rinse with water after exposure and wipe dry with a clean cloth.

Cleaning Filters

IMPORTANT: Drain oil from oil containers before oil and residue overflow!

The metal filters fitted by the factory are intended to filter out residue and grease from cooking . It need not be replaced on a regular basis but are required to be kept clean.

Filters should be cleaned after every 30 hours of use.

Remove and clean by hand or dishwasher. Spray "Formula 409®" or equivalent degreasing detergent and leave to soak if heavily soiled. Dry filters and re-install before using hood.

Replacing Filters

Should aluminum grease filters wear out due to age and prolonged use , please contact your local reseller for replacement filters. (Note: Also replace damaged filter that has punctured or broken mesh, bent or broken frame.)

Replacing the light light



WARNING

Light bulb become extremely hot when turned on.

DO NOT touch bulb until switched off and cooled.

Touching hot bulbs could cause serious burns.

Replacing LED Light Fixture

This range hood uses LED light fixture: 2W Max 12V LED

Make sure the range hood is unplugged or turn OFF breaker and the lights are cool to touch.

Place a flat-head screwdriver between light housing and hood body, gently pry up the light housing and search for the metal clip.

Apply force to the metal clip and pull out the light fixture.

Disconnect the power cable and discard the old light fixture.

Reverse the steps to install a new halogen light fixture. Turn ON breaker and range hood to test for operation.

1



2



3



4



Warranty

TO OBTAIN SERVICE UNDER WARRANTY:

You must present proof of original purchase date.

Please provide an original dated proof of purchase (sales receipt / invoice) in order to obtain service under warranty.

Lifetime Motor Warranty

The motor, which is covered by lifetime warranty, should be provided free of charge by your local reseller given it failed due to manufacturing defects. Subject to the conditions and limitations set forth below, your local reseller should, at its option, either repair or replace it with new or refurbished motor to be functionally equivalent to new. The consumer is responsible for all shipping costs.

One Year Parts Warranty

For one year from the date of original purchase, your local reseller will provide free of charge, non-consumable replacement parts or components that failed due to manufacturing defects. Subject to the conditions and limitations set forth below, your local reseller will, at its option, either repair or replace any part of its products that prove defective by reason of improper workmanship or materials. Repaired parts or replacement products will be provided by your local reseller on an exchange basis, and will be either new or refurbished to be functionally equivalent to new. The consumer is responsible for all shipping costs. Consumable parts not covered by this warranty include but not limited to: Light bulbs metal, aluminum and charcoal filters.

Who is Covered

This warranty is extended to the original purchaser for products purchased for ordinary home use

This Warranty Will Be Voided When:

Product damaged through negligence, improper installation, accident, abuse, misuse, natural disaster, insufficient or excessive electrical supply, abnormal mechanical or environmental conditions, or any unauthorized disassembly, repair, modification or failure to follow installation instructions. When product is used commercially or other than its intended purpose. Damaged because of improper connection with equipment of other manufacturers. Repaired or modified by anyone other than your local reseller's authorized agents. This limited warranty also does not apply to any product on which the original identification information has been altered, obliterated or removed, has not been handled or packaged correctly or has been sold as second-hand.

What is Not Covered:

Consumable parts such as light bulbs, metal and charcoal filters. The natural wear of finish, and wear due to improper maintenance , use of corrosive and abrasive cleaning products, pads, and oven cleaner products. Chips, dents or cracks due to abuse , misuse, freight damage, or improper installation. Damage of product caused by accident, fire, floods or act of God. The manufacturer and or distributor is not liable for, and does not cover under warranty, any loss of properties or any costs associated with removing, servicing, installing, or determining the source of problems with this product. This warranty is valid in the country of the original purchase at retail. It is non-transferable and applies only to the original purchaser and does not extend to subsequent owners of this product. Any applicable implied warranties, including the warranty of merchantability, are limited in duration to a period of express warranty as provided herein beginning with the date of original purchase at retail and, no warranties, whether express or implied, shall apply to this product thereafter.

To obtain warranty service, you may contact your local reseller from which you purchased this product. Please confirm the terms of your local reseller's policies prior to contacting. Typically, you must include product identification information, including model number and serial number with a detailed description of the problem you are experiencing. You must also include proof of the date of original retail purchase as evidence that the product is within the applicable warranty period.

Disclaimer

Carefully inspect all items for damages before accepting delivery. Note any damages on the freight bill or express receipt. Request name and signature of agent and keep copy to support your claim. Upon acceptance of items, owner the carrier's assumes responsibility for its safe arrival. Report damages to the carrier and file a claim immediately. Failure to do so may result in the denial of your claim. The carrier will furnish you with necessary forms for filing a claim.

Damages caused during transit are not covered under our warranty. Please contact us to file an insurance claim.

Please inspect contents of package(s) carefully upon receiving! We must be notified of any damages and/or missing parts within five (5) days upon your receipt of package(s). Claims will not be accepted after five (5) days. NOTE: Items were thoroughly tested and carefully packed in our factory before shipping.

Products must be returned in good working condition with ALL original parts and documentation packed in ALL original cartons, fillers and shipping cartons. A restocking fee of 15% will be charged for all approved return(s). Exchanges or returns may not be accepted if any packaging is missing.

Make sure to inspect the hood for damages and defects before installation. Appearance flaws of the hood found after installation and not affecting hood performance is not covered under our warranty for returns or exchanges. Service visits not covered under warranty will carry a service charge.

Before Installation: Return for exchange or refund (please see above for acceptable returns). After Installation: NO exchange or refund.

Contact Us

Dear Valued Customer,

Thank you for choosing Vesta as your preferred provider for kitchen appliances. We are committed to providing you with exceptional customer service and support.

If you require assistance with any of our products, please do not hesitate to contact us. You can reach our customer service team by choosing one of the methods below and one of our representatives will respond to you promptly.

Thank you for your business, and we look forward to serving you soon.

Phone:

905-886-5858

9:30am-5:00pm (Eastern Time), Monday to Friday, except holidays

Email:

service@vesta.kitchen

Online form:

<https://www.vesta.kitchen/service>

Sincerely,

The Vesta Service Team

Vesta

Simple Kitchen Solutions

www.vesta.kitchen